

**LNAV - no vertical guidance.**


LNAV/VNAV - lateral guidance from the GPS or WAAS receiver and Vertical Guidance from a barometric altimeter or the WAAS.

Without WAAS, you must have a VNAV altimeter.

LPV - Localizer Performance with Vertical Guidance, uses the WAAS GPS only.

LP - Is a future approach that will use the high precision of LPV for lateral guidance, and a barometric altimeter for vertical.

*Note: RNAV (RNP) procedures require the ability to program and track curved paths.*

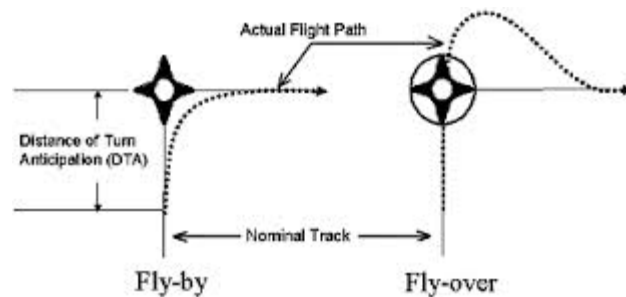

Waypoint Symbols